



# Quickstart Guide: Candy Corn

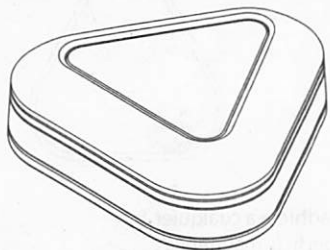

www.ablenetinc.com


## 1 Overview

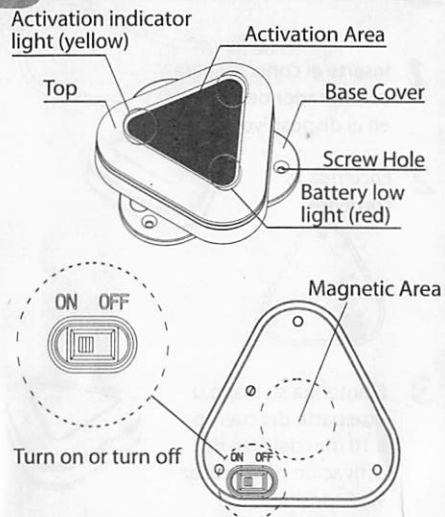

## 2 How To Use

- 1 Insert 3.5 mm switch jack into device
- 2 Turn power on
- 3 Hold hand or other part of body within 10 mm of the activation area to activate your device

## 3 Magnetic Mounting Option

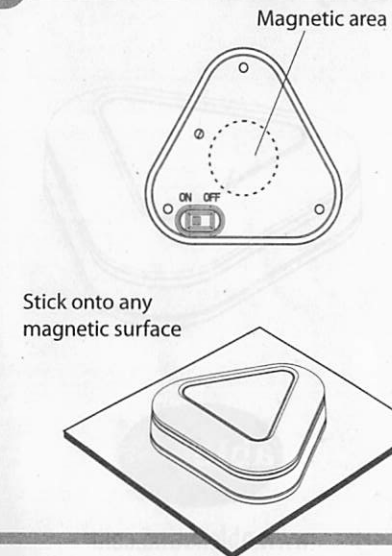

PN 980-00003 - Rev. A (05/2012)

## 4 Screw Mounting Option

- 1 Hold top and turn base clockwise
- 2 Insert screws into holes and tighten
- 3 Turn top counter-clockwise to hide screws

## 5 Changing The Battery

- 1 Hold and turn base clockwise
- 2 Insert end of paperclip into hole and press down to release internal tab. Continue to turn clockwise.
- 3 Remove base

## 6 Changing The Battery Continued

- 4 Remove old battery and replace with new CR2032 battery
- 5 Align arrow on base with arrow on inside of switch. Push and turn base clockwise.

## 7 Changing The Battery Continued

- 6 Match the direction of the top and the base
- 7 Turn the base counter clock-wise to secure