
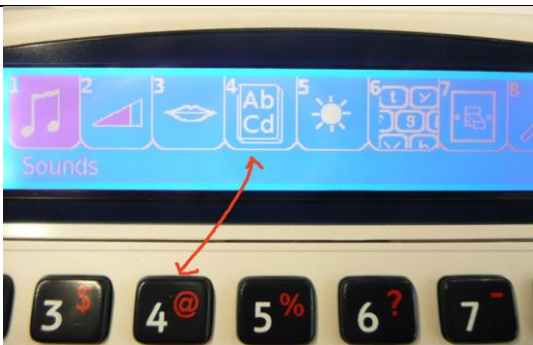


SL40 LightWRITER – instructions

How to delete words from the SL40 dictionary and prediction list

If a word appears in the prediction list and you wish to remove it you will first need to add it to the dictionary as follows:

Wherever the instruction to SELECT is given – press the DO key.

<p>Open activity bar by pressing “!” key</p>	
<p>Select 6 - setups</p>	
<p>Select 4 – word stores</p>	

Select 5 – dictionary (you will need to have advanced set-ups turned ON to access this)




Select DO to add new word – add the word you wish to delete; press DO to ENTER word




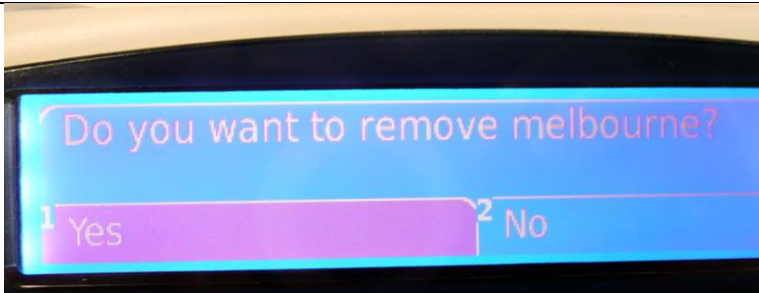
Press On/C to clear out of this section

At the “manage your dictionary” screen, select 5 – dictionary again

Use the ‘next’ key to select the letter of the alphabet under which your target word is stored. Press DO to select

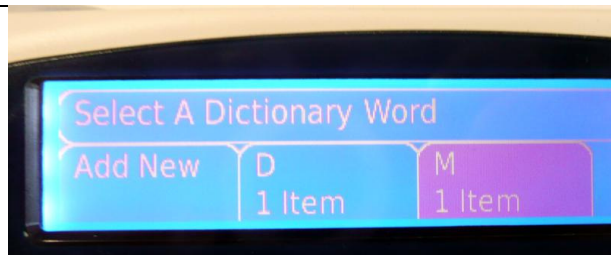

Select DO again

Now you will see the option to DELETE	
Select DO to delete; confirm by pressing DO to select yes.	
Check regular typing and the word will no longer appear in the prediction list.	

If you have further questions please contact ZYTEQ as follows:

Email: info@zyteq.com.au

Phone: (03) 9696 2944 or freecall outside Melbourne 1800 818 353

ZYTEQ pty ltd PO Box 190 South Melbourne Victoria 3205

Ph: 03 9696 2944 Fax: 03 9696 1755 Freecall: 1800 818 353

Email: info@zyteq.com.au Website: www.zyteq.com.au A.B.N. 81132 895 268